

The HyperStar Lens allows CCD imaging at f/2.0 with compatible Celestron 11" Schmidt-Cassegrain telescopes and compatible CCD cameras. These instructions show the proper methods for installing the HyperStar lens and CCD camera on the telescope, and for collimating the lens for the best optical performance.

For more details on CCD imaging, visit [www.starizona.com](http://www.starizona.com) and see the *Guide to CCD Imaging*, and visit [www.hyperstarimaging.com](http://www.hyperstarimaging.com) for video tutorials on imaging.

**Warning:** *When the HyperStar lens and CCD camera are mounted on the telescope, there is the potential for damaging the corrector plate if caution is not exercised at all times. Be especially careful not to bump the CCD camera or HyperStar lens while they are attached to the telescope. Also, be sure that all cables from the CCD camera are properly tied off to prevent them from pulling on the camera and lens. Additional tips and warnings are clearly marked throughout the assembly instructions. As long as care is used, no problems will occur.*

### Parts List

The HyperStar Lens Assembly includes three pieces:


- **HyperStar Lens**
- **Secondary Mirror Holder**
- **Counterweight**



*Secondary holder (shipped attached to lens), HyperStar lens, and counterweight*

## Positioning the Telescope & Attaching the Counterweight

- 1) Begin by aiming the telescope up at about a 45-degree angle. This will prevent the secondary mirror or HyperStar lens from falling out during installation.
- 2) Attach the counterweight by sliding it into the 1.25" visual back on the telescope, as shown below. The narrow portion of the weight allows the weight to be slid front to back for balancing once the HyperStar is installed.

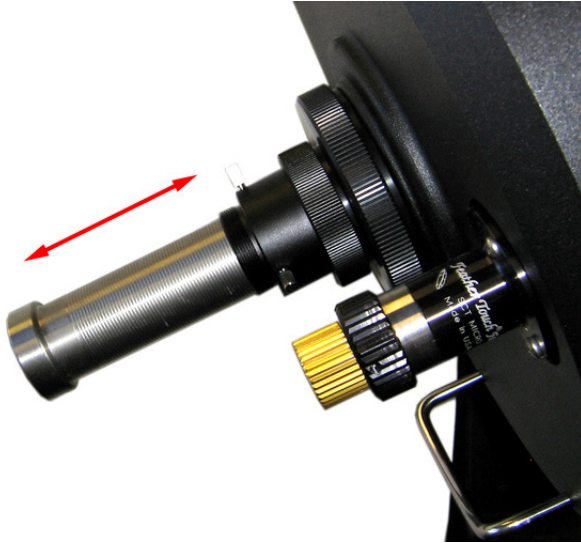

## Removing the Secondary Mirror Holder

- 3) The secondary mirror holder also functions as the bottom cover for the HyperStar lens. It simply unthreads from the bottom of the HyperStar lens. The holder consists of a metal cylinder with a vinyl cap on the bottom.



## Removing the Secondary Mirror

- 4) Unthread the retaining ring from the secondary mirror holder as shown below.



- 5) Carefully remove the secondary mirror assembly from the front of the telescope. Do not touch the surface of the mirror itself.
- 6) Place the secondary mirror assembly into the secondary mirror holder. Note the notch on the side of the secondary holder which accepts the small screw on the side of the mirror assembly. Use the original retaining ring to lock the mirror assembly in place.



## Attaching the CCD Camera

- 7) A CCD camera will attach to the HyperStar using T-threads. Most cameras have a 1.25" or 2" nosepiece that must be removed to allow the HyperStar to thread into the T-threads. DSLR cameras will attach using a standard bayonet mount.
- 8) Attach the CCD camera or DSLR to the HyperStar lens.



- 9) Carefully thread the entire assembly into the front of the telescope. Camera orientation can be changed later.

## Balancing the Telescope

Holding the telescope in place with one hand, loosen the declination clutch. Carefully release the telescope. If the front of the telescope sinks, move the counterweight farther out. If the front of the scope rises, push the counterweight farther in. Once the telescope is stationary with the clutch loose, it is balanced. Tighten the declination clutch again to engage the motor drive.

## Collimating the HyperStar Lens


The HyperStar incorporates a simple collimating system. The three pairs of screws around the base of the HyperStar push and pull to tilt the lens and correct for any alignment error.

**Warning:** *Keep in mind that the three pull screws (shown below) hold the lens in place on the telescope. Do not loosen these screws too much. Small adjustments should be all that is necessary to collimate the HyperStar.*

You will only need to make a collimation adjustment if there is a noticeable coma effect (flaring of the star images to one side) on one edge or corner of the field while the rest of the stars appear sharp. This implies the primary mirror is slightly tilted and not perfectly aligned with the optical axis of the HyperStar. This is normally compensated by adjusting the secondary mirror, but with the mirror removed it now needs to be compensated for with the HyperStar.

The easiest method is to take a single short exposure of a star field (1-3 seconds is usually enough). Make an adjustment by loosening one of the pull screws (shown below) and tightening one of the push screws. This will tip that side of the HyperStar outward. Take a second image and see if there was an improvement. If things got worse, return the pair of screws to their original position and try a different set. Continue until the stars are sharp across the full field. It may be necessary to refocus during adjustment to see the best results.

**Tip:** *Try adjusting the screws about 1/4 turn at a time. Very little adjustment is all that is usually necessary.*

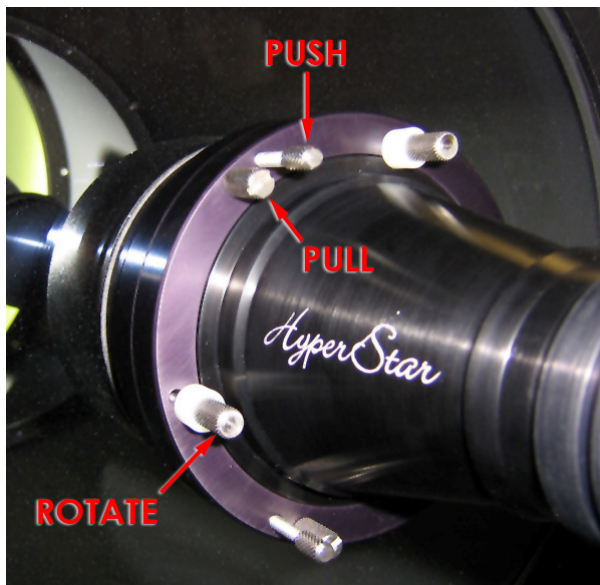

## **Adjusting Camera Position**

The third set of screws (labeled above as ROTATE) allow the HyperStar and camera to be rotated into a different orientation for the purpose of framing objects. Loosen the three screws slightly. The nylon bushings will allow the lens to rotate with the screws still somewhat snug. Once the camera and lens are in the desired orientation, tighten down the screws.

## **Using Filters**

The top portion of the HyperStar lens is a removable adapter, specific to your camera. The inside of this adapter is threaded for 2" filters. Unthread the adapter from the HyperStar lens. A 2" filter can then be threaded into the inside of the adapter. Replace the adapter on the HyperStar lens and you are set to go. Popular filters include the IDAS LPS-P2 and LPS-V3 filters, both of which work well to block light pollution.

## HyperStar C11 Specifications

**Focal Ratio:** f/2.0

**Focal Length:** 560mm

### Field of View and Resolution with Common Cameras

Camera	Field of View	Pixel Resolution
Canon EOS Rebel/40D	138' x 92'	2.35"/pixel
Starlight Xpress SXVF-H9C	55.3' x 41.1'	2.39"/pixel
Starlight Xpress SXVF-M25C	143.7' x 95.8'	2.87"/pixel
AVA StellaCam 3	39.9' x 29.5'	3.09"/pixel

### Exposure Factors (Equivalent Exposure Times)

Focal Ratio	Exposure Factor	Example Exposures
f/2.0 (HyperStar C11)	1	30 seconds
f/3.3	2.7	1.4 minutes
f/5	6.3	3.2 minutes
f/6.3	9.9	5.0 minutes
f/10	25	12.5 minutes

Starizona  
5757 N. Oracle Rd., Suite 103  
Tucson, AZ 85704  
520-292-5010  
[www.starizona.com](http://www.starizona.com)